



DAKOTA / HORIZON



TOGLIERE LA PELLICOLA TRASPARENTE DOPO AVER SEGUITO IL MONTAGGIO N°2.
 REMOVE THE TRANSPARENT FILM AFTER THE ASSEMBLING N°2.
 ENLEVER LE FILM TRANSPARENT APRES LE MONTAGE N°2.
 NEHMEN DIE TRANSPARENT FOILE NACH DEN ANBAU N°2 WEG.
 QUITAR LA PELLICULA TRANSPARENTE DESPUES DEL MONTAJE N°2.
 УДАЛИТЕ ПОЛИЭТИЛЕНОВУЮ ПЛЕНКУ ПОСЛЕ ЗАВЕРШЕНИЯ МОНТАЖА N°2.

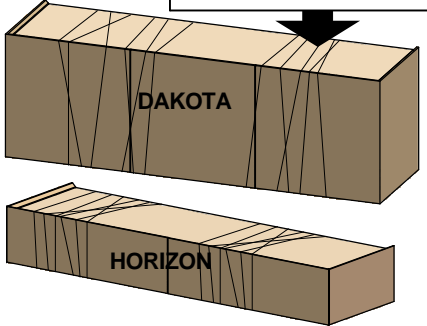

1

90° IMPORTANT

IMPORTANT 90°

N°4 M5x16 Ne

N°4 Ø10x1 Gr

N°1 pz da 3

2

N°8 Ø6 X 18 ZB

N°8 M6x20 TBCE ZB

N°1 pz da 4

N°4 pz

OPTIONAL

3

N°4 pz

ADHESIVE

65mm 5mm 65mm

3

HORIZON

N°4 pz

ADHESIVE

65mm 5mm 65mm

